

# **TEMPSTAR®**

Heating and Cooling Products

## **FURNACE CRITICAL PARTS**



**MINNESOTA AIR**

952.918.8000

[www.mnair.com](http://www.mnair.com)



MINNESOTA AIR

**TEMPSTAR®**  
Heating and Cooling Products

952.918.8000

[www.mnair.com](http://www.mnair.com)

# CMN CRITICAL PARTS

## F97CMN0601714B2

| Part #  | Description                               |
|---------|-------------------------------------------|
| 1190325 | SWITCH, DOOR                              |
| 1194017 | BOARD, CONTROL                            |
| 1184353 | BURNER KIT                                |
| 1184484 | CELL PANEL KIT                            |
| 1184342 | COUPLING BOX KIT                          |
| 1192339 | TRANSFORMER                               |
| 1177180 | FAN, BLOWER WHEEL                         |
| 1193725 | MOTOR, BLOWER                             |
| 1203391 | SENSOR, SUPPLY AIR TEMPERATURE (SAT)      |
| 1203392 | SENSOR, RETURN AIR TEMPERATURE (RAT)      |
| 1190410 | VALVE, GAS                                |
| 1176919 | IGNITOR                                   |
| 1190383 | SENSOR, FLAME                             |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1)              |
| 1184323 | SWITCH, FLAME ROLL-OUT (RS2)              |
| 1203509 | INDUCER MOTOR HOUSING KIT                 |
| 1193862 | COLLECTOR BOX KIT                         |
| 1193895 | HEAT EXCHANGER KIT, PRIMARY               |
| 1193867 | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |
| 1184423 | LIMIT SWITCH ASSEMBLY                     |
| 1192720 | SWITCH, PRESSURE                          |

## F97CMN1002122B2

| Part #      | Description                               |
|-------------|-------------------------------------------|
| 1190325     | SWITCH, DOOR                              |
| 1194017     | BOARD, CONTROL                            |
| 1184355     | BURNER KIT                                |
| 1184487     | CELL PANEL KIT                            |
| 1184343     | COUPLING BOX KIT                          |
| 1192339     | TRANSFORMER                               |
| 1172129     | FAN, BLOWER WHEEL                         |
| 1196878     | MOTOR, BLOWER                             |
| 1203391     | SENSOR, SUPPLY AIR TEMPERATURE (SAT)      |
| 1203392     | SENSOR, RETURN AIR TEMPERATURE (RAT)      |
| 1190410     | VALVE, GAS                                |
| 1176919     | IGNITOR                                   |
| 1190383     | SENSOR, FLAME                             |
| 1177033 (2) | SWITCH, FLAME ROLL-OUT (RS1)&(RS2)        |
| 1203509     | INDUCER MOTOR HOUSING KIT                 |
| 1193863     | COLLECTOR BOX KIT                         |
| 1193890     | HEAT EXCHANGER KIT, PRIMARY               |
| 1193869     | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |
| 1184422     | LIMIT SWITCH ASSEMBLY                     |
| 1192722     | SWITCH, PRESSURE                          |

## F97CMN0801714B2

| Part #      | Description                               |
|-------------|-------------------------------------------|
| 1190325     | SWITCH, DOOR                              |
| 1194017     | BOARD, CONTROL                            |
| 1184354     | BURNER KIT                                |
| 1184485     | CELL PANEL KIT                            |
| 1184342     | COUPLING BOX KIT                          |
| 1192339     | TRANSFORMER                               |
| 1177180     | FAN, BLOWER WHEEL                         |
| 1196877     | MOTOR, BLOWER                             |
| 1203391     | SENSOR, SUPPLY AIR TEMPERATURE (SAT)      |
| 1203392     | SENSOR, RETURN AIR TEMPERATURE (RAT)      |
| 1190410     | VALVE, GAS                                |
| 1176919     | IGNITOR                                   |
| 1190383     | SENSOR, FLAME                             |
| 1177033 (2) | SWITCH, FLAME ROLL-OUT (RS1)&(RS2)        |
| 1203509     | INDUCER MOTOR HOUSING KIT                 |
| 1193862     | COLLECTOR BOX KIT                         |
| 1193896     | HEAT EXCHANGER KIT, PRIMARY               |
| 1193867     | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |
| 1203435     | LIMIT SWITCH ASSEMBLY                     |
| 1192719     | SWITCH, PRESSURE                          |

## F97CMN1202422B2

| Part #      | Description                               |
|-------------|-------------------------------------------|
| 1190325     | SWITCH, DOOR                              |
| 1194017     | BOARD, CONTROL                            |
| 1184356     | BURNER KIT                                |
| 1191064     | CELL PANEL KIT                            |
| 1184344     | COUPLING BOX KIT                          |
| 1192339     | TRANSFORMER                               |
| 1176937     | FAN, BLOWER WHEEL                         |
| 1196878     | MOTOR, BLOWER                             |
| 1203391     | SENSOR, SUPPLY AIR TEMPERATURE (SAT)      |
| 1203392     | SENSOR, RETURN AIR TEMPERATURE (RAT)      |
| 1190410     | VALVE, GAS                                |
| 1176919     | IGNITOR                                   |
| 1190383     | SENSOR, FLAME                             |
| 1177033 (2) | SWITCH, FLAME ROLL-OUT (RS1)&(RS2)        |
| 1203509     | INDUCER MOTOR HOUSING KIT                 |
| 1193864     | COLLECTOR BOX KIT                         |
| 1193474     | HEAT EXCHANGER KIT, PRIMARY               |
| 1193870     | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |
| 1185909     | LIMIT SWITCH ASSEMBLY                     |
| 1192721     | SWITCH, PRESSURE                          |

## F97CMN0802120B2

| Part #      | Description                               |
|-------------|-------------------------------------------|
| 1190325     | SWITCH, DOOR                              |
| 1194017     | BOARD, CONTROL                            |
| 1184354     | BURNER KIT                                |
| 1184486     | CELL PANEL KIT                            |
| 1184342     | COUPLING BOX KIT                          |
| 1192339     | TRANSFORMER                               |
| 1172129     | FAN, BLOWER WHEEL                         |
| 1196878     | MOTOR, BLOWER                             |
| 1203391     | SENSOR, SUPPLY AIR TEMPERATURE (SAT)      |
| 1203392     | SENSOR, RETURN AIR TEMPERATURE (RAT)      |
| 1190410     | VALVE, GAS                                |
| 1176919     | IGNITOR                                   |
| 1190383     | SENSOR, FLAME                             |
| 1177033 (2) | SWITCH, FLAME ROLL-OUT (RS1)&(RS2)        |
| 1203509     | INDUCER MOTOR HOUSING KIT                 |
| 1193863     | COLLECTOR BOX KIT                         |
| 1193896     | HEAT EXCHANGER KIT, PRIMARY               |
| 1193868     | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |
| 1191124     | LIMIT SWITCH ASSEMBLY                     |
| 1192719     | SWITCH, PRESSURE                          |



MINNESOTA AIR

**TEMPSTAR®**  
Heating and Cooling Products

## CTN CRITICAL PARTS

### F96CTN0601714A1

| Part #  | Description          |
|---------|----------------------|
| 1193895 | KIT PRI HT EX 3 CELL |
| 1193867 | KIT CONDENSING HT EX |
| 1177180 | WHEEL BLOWER 11 X 8  |
| 1190743 | MOTOR BLOWER 1/2 HP  |
| 1192339 | TRANSFORMER ASY      |
| 1191352 | CONTROL BOARD        |
| 1190325 | SWITCH DOOR          |
| 1184353 | BURNER ASY           |
| 1190383 | SENSOR FLAME         |
| 1176919 | IGNITOR              |
| 1190409 | GAS VALVE            |
| 1177033 | SWITCH LIMIT 350 F   |
| 1184323 | TEMP SWITCH ROLL-OUT |
| 1184422 | SWITCH MAIN LIMIT    |
| 1193419 | INDUCER ASSEMBLY     |
| 1191550 | SWITCH PRESSURE      |

### F96CTN0801714A1

| Part #  | Description          |
|---------|----------------------|
| 1193896 | KIT PRI HT EX 4 CELL |
| 1193867 | KIT CONDENSING HT EX |
| 1177180 | WHEEL BLOWER 11 X 8  |
| 1190743 | MOTOR BLOWER 1/2 HP  |
| 1192339 | TRANSFORMER ASY      |
| 1191352 | CONTROL BOARD        |
| 1190325 | SWITCH DOOR          |
| 1184354 | BURNER ASY           |
| 1190383 | SENSOR FLAME         |
| 1176919 | IGNITOR              |
| 1190409 | GAS VALVE            |
| 1177033 | SWITCH LIMIT 350 F   |
| 1191125 | SWITCH ASSY LIMIT    |
| 1193419 | INDUCER ASSEMBLY     |
| 1184414 | SWITCH PRESSURE      |

### F96CTN0802120A1

| Part #  | Description             |
|---------|-------------------------|
| 1193896 | KIT PRI HT EX 4 CELL    |
| 1184780 | KIT SECONDARY HT EX     |
| 1172129 | WHEEL DD11x10x1/2 CW CV |
| 1183511 | MTR BLR 1 HP VAR SPD    |
| 1192339 | TRANSFORMER ASY         |
| 1191352 | CONTROL BOARD           |
| 1190325 | SWITCH DOOR             |
| 1184354 | BURNER ASY              |
| 1190383 | SENSOR FLAME            |
| 1176919 | IGNITOR                 |
| 1190409 | GAS VALVE               |
| 1177033 | SWITCH LIMIT 350 F      |
| 1184896 | SWITCH ASY MAIN LIMIT   |
| 1193419 | INDUCER ASSEMBLY        |
| 1184414 | SWITCH PRESSURE         |

### F96CTN1002122A1

| Part #  | Description             |
|---------|-------------------------|
| 1193890 | KIT PRI HT EX 5 CELL    |
| 1193869 | KIT CONDENSING HT EX    |
| 1172129 | WHEEL DD11x10x1/2 CW CV |
| 1183511 | MTR BLR 1 HP VAR SPD    |
| 1192339 | TRANSFORMER ASY         |
| 1191352 | CONTROL BOARD           |
| 1190325 | SWITCH DOOR             |
| 1184355 | BURNER ASY              |
| 1190383 | SENSOR FLAME            |
| 1176919 | IGNITOR                 |
| 1190409 | GAS VALVE               |
| 1177033 | SWITCH LIMIT 350 F      |
| 1184421 | SWITCH MAIN LIMIT       |
| 1191199 | INDUCER ASSEMBLY        |
| 1191552 | SWITCH PRESSURE         |

### F96CTN1202422A1

| Part #  | Description          |
|---------|----------------------|
| 1193891 | KIT PRI HT EX 6 CELL |
| 1184347 | KIT CONDENSING HT EX |
| 1176937 | WHEEL BLOWER 11 X 11 |
| 1190744 | MOTOR BLOWER 1 HP    |
| 1192339 | TRANSFORMER ASY      |
| 1191352 | CONTROL BOARD        |
| 1190325 | SWITCH DOOR          |
| 1184356 | BURNER ASY           |
| 1190383 | SENSOR FLAME         |
| 1176919 | IGNITOR              |
| 1190409 | GAS VALVE            |
| 1177033 | SWITCH LIMIT 350 F   |
| 1184424 | SWITCH MAIN LIMIT    |
| 1191199 | INDUCER ASSEMBLY     |
| 1191552 | SWITCH PRESSURE      |

# CTN CRITICAL PARTS

## F97CTN0601716A1

| Part #  | Description                               |
|---------|-------------------------------------------|
| 1184353 | BURNER KIT                                |
| 1184323 | SWITCH, FLAME ROLL-OUT (RS2)              |
| 1184484 | CELL PANEL KIT                            |
| 1184422 | LIMIT SWITCH ASSEMBLY                     |
| 1191550 | SWITCH, PRESSURE                          |
| 1184342 | COUPLING BOX KIT                          |
| 1194018 | BOARD, CONTROL                            |
| 1192339 | TRANSFORMER                               |
| 1177180 | FAN, BLOWER WHEEL                         |
| 1193023 | MOTOR, BLOWER                             |
| 1203391 | SENSOR, SUPPLY AIR TEMPERATURE (SAT)      |
| 1203392 | SENSOR, RETURN AIR TEMPERATURE (RAT)      |
| 1190409 | VALVE, GAS                                |
| 1176919 | IGNITOR                                   |
| 1190383 | SENSOR, FLAME                             |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1)              |
| 1191198 | INDUCER MOTOR HOUSING KIT                 |
| 1193862 | COLLECTOR BOX KIT                         |
| 1193895 | HEAT EXCHANGER KIT, PRIMARY               |
| 1193867 | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |

## F97CTN0601716A1

| Part #  | Description                               |
|---------|-------------------------------------------|
| 1184355 | BURNER KIT                                |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS2)              |
| 1184487 | CELL PANEL KIT                            |
| 1184422 | LIMIT SWITCH ASSEMBLY                     |
| 1191552 | SWITCH, PRESSURE                          |
| 1184343 | COUPLING BOX KIT                          |
| 1194018 | BOARD, CONTROL                            |
| 1192339 | TRANSFORMER                               |
| 1172129 | FAN, BLOWER WHEEL                         |
| 1196878 | MOTOR, BLOWER                             |
| 1203391 | SENSOR, SUPPLY AIR TEMPERATURE (SAT)      |
| 1203392 | SENSOR, RETURN AIR TEMPERATURE (RAT)      |
| 1190409 | VALVE, GAS                                |
| 1176919 | IGNITOR                                   |
| 1190383 | SENSOR, FLAME                             |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1)              |
| 1193420 | INDUCER MOTOR HOUSING KIT                 |
| 1193863 | COLLECTOR BOX KIT                         |
| 1193890 | HEAT EXCHANGER KIT, PRIMARY               |
| 1193869 | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |

## F97CTN0801716A1

| Part #  | Description                               |
|---------|-------------------------------------------|
| 1184354 | BURNER KIT                                |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS2)              |
| 1184485 | CELL PANEL KIT                            |
| 1191125 | LIMIT SWITCH ASSEMBLY                     |
| 1191551 | SWITCH, PRESSURE                          |
| 1184342 | COUPLING BOX KIT                          |
| 1194018 | BOARD, CONTROL                            |
| 1192339 | TRANSFORMER                               |
| 1177180 | FAN, BLOWER WHEEL                         |
| 1193726 | MOTOR, BLOWER                             |
| 1203391 | SENSOR, SUPPLY AIR TEMPERATURE (SAT)      |
| 1203392 | SENSOR, RETURN AIR TEMPERATURE (RAT)      |
| 1190409 | VALVE, GAS                                |
| 1176919 | IGNITOR                                   |
| 1190383 | SENSOR, FLAME                             |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1)              |
| 1191198 | INDUCER MOTOR HOUSING KIT                 |
| 1193862 | COLLECTOR BOX KIT                         |
| 1193896 | HEAT EXCHANGER KIT, PRIMARY               |
| 1193867 | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |

## F97CTN0801716A1

| Part #  | Description                               |
|---------|-------------------------------------------|
| 1184356 | BURNER KIT                                |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS2)              |
| 1191064 | CELL PANEL KIT                            |
| 1185909 | LIMIT SWITCH ASSEMBLY                     |
| 1191552 | SWITCH, PRESSURE                          |
| 1184344 | COUPLING BOX KIT                          |
| 1194018 | BOARD, CONTROL                            |
| 1192339 | TRANSFORMER                               |
| 1176937 | FAN, BLOWER WHEEL                         |
| 1195902 | MOTOR, BLOWER                             |
| 1211802 | SENSOR KIT                                |
| 1203392 | SENSOR, RETURN AIR TEMPERATURE (RAT)      |
| 1190409 | VALVE, GAS                                |
| 1176919 | IGNITOR                                   |
| 1190383 | SENSOR, FLAME                             |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1)              |
| 1193420 | INDUCER MOTOR HOUSING KIT                 |
| 1193864 | COLLECTOR BOX KIT                         |
| 1193474 | HEAT EXCHANGER KIT, PRIMARY               |
| 1193870 | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |

## F97CTN0802120A1

| Part #  | Description                               |
|---------|-------------------------------------------|
| 1184354 | BURNER KIT                                |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS2)              |
| 1184486 | CELL PANEL KIT                            |
| 1184896 | LIMIT SWITCH ASSEMBLY                     |
| 1191551 | SWITCH, PRESSURE                          |
| 1184342 | COUPLING BOX KIT                          |
| 1194018 | BOARD, CONTROL                            |
| 1192339 | TRANSFORMER                               |
| 1172129 | FAN, BLOWER WHEEL                         |
| 1196878 | MOTOR, BLOWER                             |
| 1203391 | SENSOR, SUPPLY AIR TEMPERATURE (SAT)      |
| 1203392 | SENSOR, RETURN AIR TEMPERATURE (RAT)      |
| 1190409 | VALVE, GAS                                |
| 1176919 | IGNITOR                                   |
| 1190383 | SENSOR, FLAME                             |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1)              |
| 1191198 | INDUCER MOTOR HOUSING KIT                 |
| 1193863 | COLLECTOR BOX KIT                         |
| 1193896 | HEAT EXCHANGER KIT, PRIMARY               |
| 1193868 | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |



MINNESOTA AIR

**TEMPSTAR®**  
Heating and Cooling Products

## ESN CRITICAL PARTS

### N92ESN0401410A1

| Part #  | Description          |
|---------|----------------------|
| 1193892 | KIT PRI HT EX 2 CELL |
| 1193882 | KIT CONDENSING HT EX |
| 1185573 | WHEEL BLOWER         |
| 1190662 | MOTOR BLOWER ECM     |
| 1192339 | TRANSFORMER ASY      |
| 1190596 | CONTROL BOARD        |
| 1190325 | SWITCH DOOR          |
| 1184398 | KIT BURNERS          |
| 1190383 | SENSOR FLAME         |
| 1176919 | IGNITOR              |
| 1190408 | VALVE GAS            |
| 1177033 | SWITCH LIMIT 350 F   |
| 1184323 | TEMP SWITCH ROLL-OUT |
| 1191276 | SWITCH TEMP          |
| 1193418 | INDUCER ASSEMBLY     |
| 1191551 | SWITCH PRESSURE      |

### N92ESN0401712A1

| Part #  | Description          |
|---------|----------------------|
| 1193892 | KIT PRI HT EX 2 CELL |
| 1186794 | KIT CONDENSING HT EX |
| 1177180 | WHEEL BLOWER 11 X 8  |
| 1190663 | MOTOR BLOWER ECM     |
| 1192339 | TRANSFORMER ASY      |
| 1190596 | CONTROL BOARD        |
| 1190325 | SWITCH DOOR          |
| 1184398 | KIT BURNERS          |
| 1190383 | SENSOR FLAME         |
| 1176919 | IGNITOR              |
| 1190408 | VALVE GAS            |
| 1177033 | SWITCH LIMIT 350 F   |
| 1184323 | TEMP SWITCH ROLL-OUT |
| 1191276 | SWITCH TEMP          |
| 1193418 | INDUCER ASSEMBLY     |
| 1191551 | SWITCH PRESSURE      |

### N92ESN0601412A1

| Part #  | Description           |
|---------|-----------------------|
| 1193889 | KIT PRIMARY HT EX     |
| 1193882 | KIT CONDENSING HT EX  |
| 1185573 | WHEEL BLOWER          |
| 1186433 | MOTOR BLOWER 1/2 HP   |
| 1192339 | TRANSFORMER ASY       |
| 1190596 | CONTROL BOARD         |
| 1190325 | SWITCH DOOR           |
| 1184353 | KIT BURNERS           |
| 1190383 | SENSOR FLAME          |
| 1176919 | IGNITOR               |
| 1190408 | VALVE GAS             |
| 1177033 | SWITCH LIMIT 350 F    |
| 1184323 | TEMP SWITCH ROLL-OUT  |
| 1184879 | SWITCH ASY MAIN LIMIT |
| 1193419 | INDUCER ASSEMBLY      |
| 1191551 | SWITCH PRESSURE       |

### N92ESN0601714A1

| Part #  | Description          |
|---------|----------------------|
| 1193895 | KIT PRI HT EX 3 CELL |
| 1193884 | KIT CONDENSING HT EX |
| 1177180 | WHEEL BLOWER 11 X 8  |
| 1186431 | MOTOR BLOWER 1/2 HP  |
| 1192339 | TRANSFORMER ASY      |
| 1190596 | CONTROL BOARD        |
| 1190325 | SWITCH DOOR          |
| 1184353 | KIT BURNER           |
| 1190383 | SENSOR FLAME         |
| 1176919 | IGNITOR              |
| 1190408 | VALVE GAS            |
| 1177033 | SWITCH LIMIT 350 F   |
| 1184323 | TEMP SWITCH ROLL-OUT |
| 1191275 | SWITCH TEMP          |
| 1193419 | INDUCER ASSEMBLY     |
| 1191551 | SWITCH PRESSURE      |

### N92ESN0801716A1

| Part #  | Description          |
|---------|----------------------|
| 1193896 | KIT PRI HT EX 4 CELL |
| 1193885 | KIT CONDENSING HT EX |
| 1177180 | WHEEL BLOWER 11 X 8  |
| 1186432 | MOTOR BLOWER 1/2 HP  |
| 1192339 | TRANSFORMER ASY      |
| 1190596 | CONTROL BOARD        |
| 1190325 | SWITCH DOOR          |
| 1184354 | KIT BURNER           |
| 1190383 | SENSOR FLAME         |
| 1176919 | IGNITOR              |
| 1190408 | VALVE GAS            |
| 1177033 | SWITCH LIMIT 350 F   |
| 1177033 | SWITCH LIMIT 350 F   |
| 1191275 | SWITCH TEMP          |
| 1193419 | INDUCER ASSEMBLY     |
| 1191551 | SWITCH PRESSURE      |

### N92ESN0802120A1

| Part #  | Description             |
|---------|-------------------------|
| 1193896 | KIT PRI HT EX 4 CELL    |
| 1193886 | KIT CONDENSING HT EX    |
| 1172129 | WHEEL DD11x10x1/2 CW CV |
| 1186438 | MOTOR BLOWER 3/4 HP     |
| 1192339 | TRANSFORMER ASY         |
| 1190596 | CONTROL BOARD           |
| 1190325 | SWITCH DOOR             |
| 1184354 | KIT BURNER              |
| 1190383 | SENSOR FLAME            |
| 1176919 | IGNITOR                 |
| 1190408 | VALVE GAS               |
| 1177033 | SWITCH LIMIT 350 F      |
| 1177033 | SWITCH LIMIT 350 F      |
| 1186809 | LIMIT SWITCH 185-145    |
| 1193419 | INDUCER ASSEMBLY        |
| 1191551 | SWITCH PRESSURE         |



**MINNESOTA AIR**

**TEMPSTAR®**  
Heating and Cooling Products

## ESN CRITICAL PARTS

### N92ESN1002120A1

| Part #  | Description             |
|---------|-------------------------|
| 1193890 | KIT PRI HT EX 5 CELL    |
| 1186798 | KIT CONDENSING HT EX    |
| 1172129 | WHEEL DD11x10x1/2 CW CV |
| 1186439 | MOTOR BLOWER 3/4 HP     |
| 1192339 | TRANSFORMER ASY         |
| 1190596 | CONTROL BOARD           |
| 1190325 | SWITCH DOOR             |
| 1184355 | KIT BURNER              |
| 1190383 | SENSOR FLAME            |
| 1176919 | IGNITOR                 |
| 1190408 | VALVE GAS               |
| 1177033 | SWITCH LIMIT 350 F      |
| 1177033 | SWITCH LIMIT 350 F      |
| 1185458 | SWITCH ASSY, MAIN LIMIT |
| 1193420 | INDUCER ASSEMBLY        |
| 1191550 | SWITCH PRESSURE         |

### N92ESN1202420A1

| Part #  | Description          |
|---------|----------------------|
| 1193474 | KIT PRI HT EX 6 CELL |
| 1186799 | KIT CONDENSING HT EX |
| 1176937 | WHEEL BLOWER 11 X 11 |
| 1190665 | MOTOR BLOWER ECM     |
| 1192339 | TRANSFORMER ASY      |
| 1190596 | CONTROL BOARD        |
| 1190325 | SWITCH DOOR          |
| 1184356 | KIT BURNER           |
| 1190383 | SENSOR FLAME         |
| 1176919 | IGNITOR              |
| 1190408 | VALVE GAS            |
| 1177033 | SWITCH LIMIT 350 F   |
| 1177033 | SWITCH LIMIT 350 F   |
| 1186810 | LIMIT SWITCH 165-125 |
| 1193420 | INDUCER ASSEMBLY     |
| 1191553 | PRESSURE SWITCH ASY  |



MINNESOTA AIR

**TEMPSTAR**  
Heating and Cooling Products

## MSB CRITICAL PARTS

### N9MSB0401410C1

| Part #    | Description           |
|-----------|-----------------------|
| 1193892   | PRIMARY HT EX 2 CELL  |
| 1186793   | CONDENSING HT EX      |
| 1185573   | WHEEL BLOWER          |
| 1186379   | MTR BLR 1/3 HP        |
| P291-0754 | CAP RN OV 370V 7.5 X  |
| 1192339   | TRANSFORMER ASY       |
| 1186024   | BOARD CONTROL         |
| 1171981   | SWITCH DOOR S         |
| 1184398   | BURNER ASY            |
| 1190383   | SENSOR FLAME          |
| 1176919   | IGNITOR               |
| 1190408   | VALVE GAS             |
| 1177033   | SWITCH LIMIT 350 F    |
| 1184323   | TEMP SWITCH ROLL-OUT  |
| 1184879   | SWITCH ASY MAIN LIMIT |
| 1193418   | INDUCER ASY           |
| 1184288   | TRAP CONDENSATE       |
| 1191551   | SWITCH PRESSURE       |
| 1184395   | CPLG BOX              |
| 1186064   | HARNESS ASY MAIN      |

### N9MSB0801716B2

| Part #    | Description            |
|-----------|------------------------|
| 1193896   | PRIMARY HT EX 4 CELL   |
| 1185452   | CONDENSING HT EX       |
| 1177180   | WHEEL BLOWER 11 X 8    |
| 1186787   | MOTOR BLOWER 1/2 HP    |
| P291-1004 | CAP RN OV 440V 10 X    |
| 1192339   | TRANSFORMER ASY        |
| 1186024   | BOARD CONTROL          |
| 1171981   | SWITCH DOOR S          |
| 1184354   | BURNER ASY             |
| 1190383   | SENSOR FLAME           |
| 1176919   | IGNITOR                |
| 1190408   | VALVE GAS              |
| 1177033   | SWITCH LIMIT 350 F     |
| 1185687   | SWITCH ASY, MAIN LIMIT |
| 1193419   | INDUCER ASY            |
| 1184288   | TRAP CONDENSATE        |
| 1191551   | SWITCH PRESSURE        |
| 1184342   | CPLG BOX               |
| 1186064   | HARNESS ASY MAIN       |

### N9MSB0601412C1

| Part #    | Description               |
|-----------|---------------------------|
| 1184803   | PRIMARY HT EX 3 CELL ALUM |
| 1186793   | CONDENSING HT EX          |
| 1185573   | WHEEL BLOWER              |
| 1186379   | MTR BLR 1/3 HP            |
| P291-0754 | CAP RN OV 370V 7.5 X      |
| 1192339   | TRANSFORMER ASY           |
| 1186024   | BOARD CONTROL             |
| 1171981   | SWITCH DOOR S             |
| 1184353   | BURNER ASY                |
| 1190383   | SENSOR FLAME              |
| 1176919   | IGNITOR                   |
| 1190408   | VALVE GAS                 |
| 1177033   | SWITCH LIMIT 350 F        |
| 1184323   | TEMP SWITCH ROLL-OUT      |
| 1185458   | SWITCH ASSY, MAIN LIMIT   |
| 1193419   | INDUCER ASY               |
| 1184288   | TRAP CONDENSATE           |
| 1191551   | SWITCH PRESSURE           |
| 1184395   | CPLG BOX                  |
| 1186064   | HARNESS ASY MAIN          |

### N9MSB1002120C1

| Part #    | Description                  |
|-----------|------------------------------|
| 1186217   | PRIMARY HT EX 5 CELL         |
| 1186798   | CONDENSING HT EX             |
| 1011420   | WHEEL DD11x10x1/2 CW<br>CC S |
| 1186423   | MTR BLR 3/4 HP               |
| P291-1004 | CAP RN OV 440V + 10          |
| 1192339   | TRANSFORMER ASY              |
| 1186024   | BOARD CONTROL                |
| 1171981   | SWITCH DOOR S                |
| 1184355   | BURNER ASY                   |
| 1190383   | SENSOR FLAME                 |
| 1176919   | IGNITOR                      |
| 1190408   | VALVE GAS                    |
| 1177033   | SWITCH LIMIT 350 F           |
| 1185458   | SWITCH ASSY, MAIN LIMIT      |
| 1191199   | INDUCER ASY                  |
| 1184288   | TRAP CONDENSATE              |
| 1191550   | SWITCH PRESSURE              |
| 1184343   | CPLG BOX                     |
| 1186064   | HARNESS ASY MAIN             |

952.918.8000

www.mnair.com



**MINNESOTA AIR**

**N9MSE0401410A2**

| Part #    | Description            |
|-----------|------------------------|
| 1186024   | CONTROL BOARD          |
| 1186064   | MAIN WIRING HARNESS    |
| 1184660   | BLOWER MOTOR           |
| P291-1504 | CAP RN OV 440V 15 X    |
| 1185573   | BLOWER WHEEL           |
| 1192339   | TRANSFORMER            |
| 1176919   | IGNITER                |
| 1190383   | FLAME SENSOR           |
| 1190408   | GAS VALVE              |
| 1193418   | INDUCER ASSY.          |
| 1191550   | PRESSURE SWITCH        |
| 1184423   | MAIN LIMIT             |
| 1177033   | SWITCH LIMIT 350F      |
| 1184323   | ROLL OUT               |
| 1184398   | BURNER KIT             |
| 1184395   | COUPLING BOX           |
| 1184288   | CONDENSATE TRAP        |
| 1171981   | DOOR SWITCH            |
| 1193892   | PRIMARY HT. EX. 2 CELL |
| 1193865   | CONDENSING HT. EX.     |

**N9MSE0801716A2**

| Part #      | Description            |
|-------------|------------------------|
| 1186024     | CONTROL BOARD          |
| 1186064     | MAIN WIRING HARNESS    |
| 1184663     | BLOWER MOTOR           |
| P291-2504   | CAP RN OV 440V 25 MFD  |
| 1177180     | BLOWER WHEEL           |
| 1192339     | TRANSFORMER            |
| 1176919     | IGNITER                |
| 1190383     | FLAME SENSOR           |
| 1190408     | GAS VALVE              |
| 1193419     | INDUCER ASSY.          |
| 1191551     | PRESSURE SWITCH        |
| 1184422     | MAIN LIMIT             |
| (2) 1177033 | ROLL OUT               |
| 1184354     | BURNER KIT             |
| 1184342     | COUPLING BOX           |
| 1184288     | CONDENSATE TRAP        |
| 1187354     | DOOR SWITCH            |
| 1193896     | PRIMARY HT. EX. 4 CELL |
| 1193867     | CONDENSING HT. EX.     |

**TEMPSTAR®**  
Heating and Cooling Products

**MSE CRITICAL PARTS**

**N9MSE0601714A2**

| Part #    | Description            |
|-----------|------------------------|
| 1186024   | CONTROL BOARD          |
| 1186064   | MAIN WIRING HARNESS    |
| 1184661   | BLOWER MOTOR           |
| P291-1504 | CAP RN OV 440V 15 X    |
| 1177180   | BLOWER WHEEL           |
| 1192339   | TRANSFORMER            |
| 1176919   | IGNITER                |
| 1190383   | FLAME SENSOR           |
| 1190408   | GAS VALVE              |
| 1193419   | INDUCER ASSY.          |
| 1191550   | PRESSURE SWITCH        |
| 1184421   | MAIN LIMIT             |
| 1177033   | SWITCH LIMIT 350F      |
| 1184323   | ROLL OUT               |
| 1184353   | BURNER KIT             |
| 1184342   | COUPLING BOX           |
| 1184288   | CONDENSATE TRAP        |
| 1171981   | DOOR SWITCH            |
| 1186216   | PRIMARY HT. EX. 3 CELL |
| 1193867   | CONDENSING HT. EX.     |

**N9MSE1002120A2**

| Part #      | Description            |
|-------------|------------------------|
| 1186024     | CONTROL BOARD          |
| 1186064     | MAIN WIRING HARNESS    |
| 1186933     | BLOWER MOTOR           |
| P291-3504   | CAPACITOR 440 35       |
| 1011420     | BLOWER WHEEL           |
| 1192339     | TRANSFORMER            |
| 1176919     | IGNITER                |
| 1190383     | FLAME SENSOR           |
| 1190408     | GAS VALVE              |
| 1191199     | INDUCER ASSY.          |
| 1191552     | PRESSURE SWITCH        |
| 1184421     | MAIN LIMIT             |
| (2) 1177033 | ROLL OUT               |
| 1184355     | BURNER KIT             |
| 1184343     | COUPLING BOX           |
| 1184288     | CONDENSATE TRAP        |
| 1187354     | DOOR SWITCH            |
| 1186217     | PRIMARY HT. EX. 5 CELL |
| 1193869     | CONDENSING HT. EX.     |

952.918.8000

www.mnair.com



MINNESOTA AIR

**TEMPSTAR**  
Heating and Cooling Products

## MSN CRITICAL PARTS

### N9MSB0801716B2

| Part #      | Description                 |
|-------------|-----------------------------|
| 1192992     | BOARD, CONTROL              |
| 1171981     | SWITCH, DOOR                |
| 1192339     | TRANSFORMER ASSEMBLY        |
| 1179162     | WHEEL, BLOWER               |
| 1196875     | MOTOR, BLOWER               |
| 1176929     | VALVE, GAS                  |
| 1176914     | BURNER ASSEMBLY             |
| 1176919     | IGNITOR                     |
| 1190383     | SENSOR, FLAME               |
| 1177033     | SWITCH, FLAME ROLLOUT (RS1) |
| 1196818     | INDUCER MOTOR KIT, PRIMARY  |
| 1183390 (2) | HEAT EXCHANGER KIT          |
| 1176902     | SWITCH,TEMP                 |
| 1186925     | SWITCH, LIMIT               |
| 1191249     | SWITCH, PRESSURE            |

### N80MSN0451714A2

| Part #      | Description                 |
|-------------|-----------------------------|
| 1192992     | BOARD, CONTROL              |
| 1171981     | SWITCH, DOOR                |
| 1192339     | TRANSFORMER ASSEMBLY        |
| 1176935     | WHEEL, BLOWER               |
| 1193026     | MOTOR, BLOWER               |
| 1176929     | VALVE, GAS                  |
| 1176914     | BURNER ASSEMBLY             |
| 1176919     | IGNITOR                     |
| 1190383     | SENSOR, FLAME               |
| 1177033     | SWITCH, FLAME ROLLOUT (RS1) |
| 1196818     | INDUCER MOTOR KIT, PRIMARY  |
| 1183390 (2) | HEAT EXCHANGER KIT          |
| 1176902     | SWITCH,TEMP                 |
| 1190831     | SWITCH, LIMIT               |
| 1191249     | SWITCH, PRESSURE            |

### N80MSN0701412A2

| Part #      | Description                 |
|-------------|-----------------------------|
| 1192992     | BOARD, CONTROL              |
| 1171981     | SWITCH, DOOR                |
| 1192339     | TRANSFORMER ASSEMBLY        |
| 1179162     | WHEEL, BLOWER               |
| 1196875     | MOTOR, BLOWER               |
| 1176929     | VALVE, GAS                  |
| 1176915     | BURNER ASSEMBLY             |
| 1176919     | IGNITOR                     |
| 1190383     | SENSOR, FLAME               |
| 1177033     | SWITCH, FLAME ROLLOUT (RS1) |
| 1196819     | INDUCER MOTOR KIT, PRIMARY  |
| 1183390 (3) | HEAT EXCHANGER KIT          |
| 1176902     | SWITCH,TEMP                 |
| 1190610     | SWITCH, LIMIT               |
| 1191249     | SWITCH, PRESSURE            |

### N80MSN0701712A2

| Part #      | Description                 |
|-------------|-----------------------------|
| 1192992     | BOARD, CONTROL              |
| 1171981     | SWITCH, DOOR                |
| 1192339     | TRANSFORMER ASSEMBLY        |
| 1176935     | WHEEL, BLOWER               |
| 1196875     | MOTOR, BLOWER               |
| 1176929     | VALVE, GAS                  |
| 1176915     | BURNER ASSEMBLY             |
| 1176919     | IGNITOR                     |
| 1190383     | SENSOR, FLAME               |
| 1177033     | SWITCH, FLAME ROLLOUT (RS1) |
| 1196819     | INDUCER MOTOR KIT, PRIMARY  |
| 1183390 (3) | HEAT EXCHANGER KIT          |
| 1176902     | SWITCH,TEMP                 |
| 1183523     | SWITCH, LIMIT               |
| 1191249     | SWITCH, PRESSURE            |

### N80MSN0901714A2

| Part #      | Description                 |
|-------------|-----------------------------|
| 1192992     | BOARD, CONTROL              |
| 1171981     | SWITCH, DOOR                |
| 1192339     | TRANSFORMER ASSEMBLY        |
| 1176935     | WHEEL, BLOWER               |
| 1193026     | MOTOR, BLOWER               |
| 1176929     | VALVE, GAS                  |
| 1176916     | BURNER ASSEMBLY             |
| 1176919     | IGNITOR                     |
| 1190383     | SENSOR, FLAME               |
| 1177033     | SWITCH, FLAME ROLLOUT (RS1) |
| 1196820     | INDUCER MOTOR KIT, PRIMARY  |
| 1183390 (4) | HEAT EXCHANGER KIT          |
| 1176902     | SWITCH,TEMP                 |
| 1183524     | SWITCH, LIMIT               |
| 1191249     | SWITCH, PRESSURE            |

### N9MSB0801716B2

| Part #  | Description                 |
|---------|-----------------------------|
| 1192992 | BOARD, CONTROL              |
| 1171981 | SWITCH, DOOR                |
| 1192339 | TRANSFORMER ASSEMBLY        |
| 1176937 | WHEEL, BLOWER               |
| 1193024 | MOTOR, BLOWER               |
| 1176929 | VALVE, GAS                  |
| 1176917 | BURNER ASSEMBLY             |
| 1176919 | IGNITOR                     |
| 1190383 | SENSOR, FLAME               |
| 1177033 | SWITCH, FLAME ROLLOUT (RS1) |
| 1196821 | INDUCER MOTOR KIT, PRIMARY  |
| 1183390 | HEAT EXCHANGER KIT          |
| 1176902 | SWITCH,TEMP                 |
| 1190623 | SWITCH, LIMIT               |
| 1183833 | SWITCH, LIMIT               |
| 1191249 | SWITCH, PRESSURE            |

### N9MSB0801716B2

| Part #  | Description          | Part #  | Description                 | Part #  | Description      |
|---------|----------------------|---------|-----------------------------|---------|------------------|
| 1192992 | BOARD, CONTROL       | 1176918 | BURNER ASSEMBLY             | 1176902 | SWITCH,TEMP      |
| 1171981 | SWITCH, DOOR         | 1176919 | IGNITOR                     | 1190610 | SWITCH, LIMIT    |
| 1192339 | TRANSFORMER ASSEMBLY | 1190383 | SENSOR, FLAME               | 1191249 | SWITCH, PRESSURE |
| 1176937 | WHEEL, BLOWER        | 1177033 | SWITCH, FLAME ROLLOUT (RS1) |         |                  |
| 1193023 | MOTOR, BLOWER        | 1196822 | INDUCER MOTOR KIT, PRIMARY  |         |                  |
| 1176929 | VALVE, GAS           | 1183390 | HEAT EXCHANGER KIT          |         |                  |

952.918.8000

www.mnair.com

# MSN CRITICAL PARTS

## N92MSN0401412A1

| Part #  | Description                   |
|---------|-------------------------------|
| 1192992 | CONTROL BOARD                 |
| 1184518 | FAN, BLOWER WHEEL             |
| 1193026 | MOTOR,BLOWER                  |
| 1192339 | TRANSFORMER                   |
| 1190408 | VALVE,GAS                     |
| 1184398 | BURNER KIT                    |
| 1184323 | SWITCH, FLAME ROLL-OUT (RS2)  |
| 1184482 | CELL PANEL KIT                |
| 1191276 | TEMPERATURE SWITCH, SPST TYPE |
| 1191551 | SWITCH,PRESSURE               |
| 1184395 | CPLG BOX KIT                  |
| 1176919 | IGNITOR                       |
| 1190383 | SENSOR,FLAME                  |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1)  |
| 1193418 | INDUCER HSG KIT               |
| 1193861 | COLL BOX KIT                  |
| 1193892 | REPLM HX KIT                  |
| 1193882 | COND HX KIT                   |

## N92MSN0601714A1

| Part #  | Description                  |
|---------|------------------------------|
| 1192992 | CONTROL BOARD                |
| 1177180 | WHEEL,BLOWER                 |
| 1193026 | MOTOR,BLOWER                 |
| 1192339 | TRANSFORMER                  |
| 1190408 | VALVE,GAS                    |
| 1184353 | BURNER KIT                   |
| 1184323 | SWITCH, FLAME ROLL-OUT (RS2) |
| 1186808 | CELL PANEL KIT               |
| 1191551 | SWITCH,PRESSURE              |
| 1184342 | CPLG BOX KIT                 |
| 1176919 | IGNITOR                      |
| 1190383 | SENSOR,FLAME                 |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1) |
| 1191198 | INDUCER HSG KIT              |
| 1193862 | COLL BOX KIT                 |
| 1193895 | REPLM HX KIT                 |
| 1193884 | COND HX KIT                  |
| 1193440 | SWITCH,LIMIT                 |

## N92MSN1202420A1

| Part #  | Description   | Part #  | Description                  | Part #  | Description                  |
|---------|---------------|---------|------------------------------|---------|------------------------------|
| 1192992 | CONTROL BOARD | 1177033 | SWITCH, FLAME ROLL-OUT (RS2) | 1177033 | SWITCH, FLAME ROLL-OUT (RS1) |
| 1176937 | WHEEL,BLOWER  | 1191126 | SWITCH,LIMIT                 | 1193420 | INDUCER HSG KIT              |
| 1196877 | MOTOR,BLOWER  | 1191553 | SWITCH,PRESSURE              | 1193864 | COLL BOX KIT                 |
| 1192339 | TRANSFORMER   | 1184344 | CPLG BOX KIT                 | 1193474 | REPLM HX KIT                 |
| 1190408 | VALVE,GAS     | 1176919 | IGNITOR                      | 1193888 | COND HX KIT                  |
| 1184356 | BURNER KIT    | 1190383 | SENSOR,FLAME                 | 1186790 | CELL PANEL KIT               |

## N92MSN0401712A1

| Part #  | Description                   |
|---------|-------------------------------|
| 1192992 | CONTROL BOARD                 |
| 1177180 | WHEEL,BLOWER                  |
| 1193026 | MOTOR,BLOWER                  |
| 1192339 | TRANSFORMER                   |
| 1190408 | VALVE,GAS                     |
| 1184398 | BURNER KIT                    |
| 1184323 | SWITCH, FLAME ROLL-OUT (RS2)  |
| 1184490 | CELL PANEL KIT                |
| 1191276 | TEMPERATURE SWITCH, SPST TYPE |
| 1191551 | SWITCH,PRESSURE               |
| 1184395 | CPLG BOX KIT                  |
| 1176919 | IGNITOR                       |
| 1190383 | SENSOR,FLAME                  |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1)  |
| 1193418 | INDUCER HSG KIT               |
| 1193862 | COLL BOX KIT                  |
| 1193892 | REPLM HX KIT                  |
| 1193883 | COND HX KIT                   |

## N92MSN0801716A1

| Part #  | Description                  |
|---------|------------------------------|
| 1192992 | CONTROL BOARD                |
| 1177180 | WHEEL,BLOWER                 |
| 1196877 | MOTOR,BLOWER                 |
| 1192339 | TRANSFORMER                  |
| 1190408 | VALVE,GAS                    |
| 1184354 | BURNER KIT                   |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS2) |
| 1186792 | CELL PANEL KIT               |
| 1191275 | SWITCH,LIMIT                 |
| 1191551 | SWITCH,PRESSURE              |
| 1184342 | CPLG BOX KIT                 |
| 1176919 | IGNITOR                      |
| 1190383 | SENSOR,FLAME                 |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1) |
| 1191198 | INDUCER HSG KIT              |
| 1193862 | COLL BOX KIT                 |
| 1193896 | REPLM HX KIT                 |
| 1193885 | COND HX KIT                  |

## N92MSN0601412A1

| Part #  | Description                  |
|---------|------------------------------|
| 1192992 | CONTROL BOARD                |
| 1184518 | FAN, BLOWER WHEEL            |
| 1193026 | MOTOR,BLOWER                 |
| 1192339 | TRANSFORMER                  |
| 1190408 | VALVE,GAS                    |
| 1184353 | BURNER KIT                   |
| 1184323 | SWITCH, FLAME ROLL-OUT (RS2) |
| 1184483 | CELL PANEL KIT               |
| 1191551 | SWITCH,PRESSURE              |
| 1184395 | CPLG BOX KIT                 |
| 1176919 | IGNITOR                      |
| 1190383 | SENSOR,FLAME                 |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1) |
| 1191198 | INDUCER HSG KIT              |
| 1193861 | COLL BOX KIT                 |
| 1193889 | REPLM HX KIT                 |
| 1193882 | COND HX KIT                  |
| 1193439 | SWITCH ASSY                  |

## N92MSN1002120A1

| Part #  | Description                  |
|---------|------------------------------|
| 1192992 | CONTROL BOARD                |
| 1172129 | WHEEL,BLOWER                 |
| 1196877 | MOTOR,BLOWER                 |
| 1192339 | TRANSFORMER                  |
| 1190408 | VALVE,GAS                    |
| 1184355 | BURNER KIT                   |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS2) |
| 1184487 | CELL PANEL KIT               |
| 1191550 | SWITCH,PRESSURE              |
| 1184343 | CPLG BOX KIT                 |
| 1176919 | IGNITOR                      |
| 1190383 | SENSOR,FLAME                 |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1) |
| 1193420 | INDUCER HSG KIT              |
| 1193863 | COLL BOX KIT                 |
| 1193890 | REPLM HX KIT                 |
| 1193887 | COND HX KIT                  |
| 1185458 | SWITCH ASSY                  |



MINNESOTA AIR

**TEMPSTAR**  
Heating and Cooling Products

## MSN CRITICAL PARTS

### N96MSN0401410A1

| Part #  | Description                               |
|---------|-------------------------------------------|
| 1192992 | BOARD, CONTROL                            |
| 1191152 | WHEEL, BLOWER                             |
| 1193022 | MOTOR, BLOWER                             |
| 1192339 | TRANSFORMER                               |
| 1190408 | VALVE, GAS                                |
| 1185566 | BURNER KIT                                |
| 1184323 | SWITCH, FLAME ROLL-OUT (RS2)              |
| 1184482 | CELL PANEL KIT                            |
| 1184879 | LIMIT SWITCH ASSEMBLY                     |
| 1191550 | SWITCH, PRESSURE                          |
| 1184395 | COUPLING BOX KIT                          |
| 1176919 | IGNITOR                                   |
| 1190383 | SENSOR, FLAME                             |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1)              |
| 1193418 | INDUCER MOTOR/HOUSING KIT                 |
| 1193861 | COLLECTOR BOX KIT                         |
| 1193892 | PRIMARY HEAT EXCHANGER KIT                |
| 1193865 | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |

### N96MSN0401712A1

| Part #  | Description                               |
|---------|-------------------------------------------|
| 1192992 | BOARD, CONTROL                            |
| 1177180 | WHEEL, BLOWER                             |
| 1193026 | MOTOR, BLOWER                             |
| 1192339 | TRANSFORMER                               |
| 1190408 | VALVE, GAS                                |
| 1185566 | BURNER KIT                                |
| 1184323 | SWITCH, FLAME ROLL-OUT (RS2)              |
| 1184490 | CELL PANEL KIT                            |
| 1184421 | LIMIT SWITCH ASSEMBLY                     |
| 1191550 | SWITCH, PRESSURE                          |
| 1184395 | COUPLING BOX KIT                          |
| 1176919 | IGNITOR                                   |
| 1190383 | SENSOR, FLAME                             |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1)              |
| 1193418 | INDUCER MOTOR/HOUSING KIT                 |
| 1193862 | COLLECTOR BOX KIT                         |
| 1193892 | PRIMARY HEAT EXCHANGER KIT                |
| 1193866 | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |

### N96MSN0601412A1

| Part #  | Description                               |
|---------|-------------------------------------------|
| 1192992 | BOARD, CONTROL                            |
| 1191152 | WHEEL, BLOWER                             |
| 1193022 | MOTOR, BLOWER                             |
| 1192339 | TRANSFORMER                               |
| 1190408 | VALVE, GAS                                |
| 1184353 | BURNER KIT                                |
| 1184323 | SWITCH, FLAME ROLL-OUT (RS2)              |
| 1184483 | CELL PANEL KIT                            |
| 1191124 | LIMIT SWITCH ASSEMBLY                     |
| 1191550 | SWITCH, PRESSURE                          |
| 1184395 | COUPLING BOX KIT                          |
| 1176919 | IGNITOR                                   |
| 1190383 | SENSOR, FLAME                             |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1)              |
| 1191198 | INDUCER MOTOR/HOUSING KIT                 |
| 1193861 | COLLECTOR BOX KIT                         |
| 1193889 | PRIMARY HEAT EXCHANGER KIT                |
| 1193865 | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |

### N96MSN0601716A1

| Part #  | Description                               |
|---------|-------------------------------------------|
| 1192992 | BOARD, CONTROL                            |
| 1177180 | WHEEL, BLOWER                             |
| 1196877 | MOTOR, BLOWER                             |
| 1192339 | TRANSFORMER                               |
| 1190408 | VALVE, GAS                                |
| 1184353 | BURNER KIT                                |
| 1184323 | SWITCH, FLAME ROLL-OUT (RS2)              |
| 1184484 | CELL PANEL KIT                            |
| 1184421 | LIMIT SWITCH ASSEMBLY                     |
| 1191550 | SWITCH, PRESSURE                          |
| 1184342 | COUPLING BOX KIT                          |
| 1176919 | IGNITOR                                   |
| 1190383 | SENSOR, FLAME                             |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1)              |
| 1191198 | INDUCER MOTOR/HOUSING KIT                 |
| 1193862 | COLLECTOR BOX KIT                         |
| 1193895 | PRIMARY HEAT EXCHANGER KIT                |
| 1193867 | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |

### N96MSN0801716A1

| Part #      | Description                               |
|-------------|-------------------------------------------|
| 1192992     | BOARD, CONTROL                            |
| 1177180     | WHEEL, BLOWER                             |
| 1193027     | MOTOR, BLOWER                             |
| 1192339     | TRANSFORMER                               |
| 1190408     | VALVE, GAS                                |
| 1184354     | BURNER KIT                                |
| 1184485     | CELL PANEL KIT                            |
| 1184422     | LIMIT SWITCH ASSEMBLY                     |
| 1191551     | SWITCH, PRESSURE                          |
| 1184342     | COUPLING BOX KIT                          |
| 1176919     | IGNITOR                                   |
| 1190383     | SENSOR, FLAME                             |
| 1177033 (2) | SWITCH, FLAME ROLL-OUT (RS1)&(RS2)        |
| 1191198     | INDUCER MOTOR/HOUSING KIT                 |
| 1193862     | COLLECTOR BOX KIT                         |
| 1193896     | PRIMARY HEAT EXCHANGER KIT                |
| 1193867     | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |

### N96MSN0802120A1

| Part #      | Description                               |
|-------------|-------------------------------------------|
| 1192992     | BOARD, CONTROL                            |
| 1172129     | WHEEL, BLOWER                             |
| 1196878     | MOTOR, BLOWER                             |
| 1192339     | TRANSFORMER                               |
| 1190408     | VALVE, GAS                                |
| 1184354     | BURNER KIT                                |
| 1184486     | CELL PANEL KIT                            |
| 1184896     | LIMIT SWITCH ASSEMBLY                     |
| 1191551     | SWITCH, PRESSURE                          |
| 1184342     | COUPLING BOX KIT                          |
| 1176919     | IGNITOR                                   |
| 1190383     | SENSOR, FLAME                             |
| 1177033 (2) | SWITCH, FLAME ROLL-OUT (RS1)&(RS2)        |
| 1191198     | INDUCER MOTOR/HOUSING KIT                 |
| 1193863     | COLLECTOR BOX KIT                         |
| 1193896     | PRIMARY HEAT EXCHANGER KIT                |
| 1193868     | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |

952.918.8000

www.mnair.com



MINNESOTA AIR

**TEMPSTAR®**  
Heating and Cooling Products

## MSN CRITICAL PARTS

### N96MSN1002120A1

| Part #      | Description                               |
|-------------|-------------------------------------------|
| 1192992     | BOARD, CONTROL                            |
| 1172129     | WHEEL, BLOWER                             |
| 1193028     | MOTOR, BLOWER                             |
| 1192339     | TRANSFORMER                               |
| 1190408     | VALVE, GAS                                |
| 1184355     | BURNER KIT                                |
| 1184487     | CELL PANEL KIT                            |
| 1184421     | LIMIT SWITCH ASSEMBLY                     |
| 1191552     | SWITCH, PRESSURE                          |
| 1184343     | COUPLING BOX KIT                          |
| 1176919     | IGNITOR                                   |
| 1190383     | SENSOR, FLAME                             |
| 1177033 (2) | SWITCH, FLAME ROLL-OUT (RS1)&(RS2)        |
| 1193420     | INDUCER MOTOR/HOUSING KIT                 |
| 1193863     | COLLECTOR BOX KIT                         |
| 1193890     | PRIMARY HEAT EXCHANGER KIT                |
| 1193869     | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |

### N96MSN1202422A1

| Part #      | Description                               |
|-------------|-------------------------------------------|
| 1192992     | BOARD, CONTROL                            |
| 1176937     | WHEEL, BLOWER                             |
| 1196878     | MOTOR, BLOWER                             |
| 1192339     | TRANSFORMER                               |
| 1190408     | VALVE, GAS                                |
| 1184356     | BURNER KIT                                |
| 1191064     | CELL PANEL KIT                            |
| 1191126     | LIMIT SWITCH ASSEMBLY                     |
| 1191552     | SWITCH, PRESSURE                          |
| 1184344     | COUPLING BOX KIT                          |
| 1176919     | IGNITOR                                   |
| 1190383     | SENSOR, FLAME                             |
| 1177033 (2) | SWITCH, FLAME ROLL-OUT (RS1)&(RS2)        |
| 1193420     | INDUCER MOTOR/HOUSING KIT                 |
| 1193864     | COLLECTOR BOX KIT                         |
| 1193474     | PRIMARY HEAT EXCHANGER KIT                |
| 1193870     | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |

### N96MSN1402422A1

| Part #      | Description                               |
|-------------|-------------------------------------------|
| 1192992     | BOARD, CONTROL                            |
| 1176937     | WHEEL, BLOWER                             |
| 1193028     | MOTOR, BLOWER                             |
| 1192339     | TRANSFORMER                               |
| 1190408     | VALVE, GAS                                |
| 1184777     | BURNER KIT                                |
| 1191065     | CELL PANEL KIT                            |
| 1186801     | LIMIT SWITCH ASSEMBLY                     |
| 1191553     | SWITCH, PRESSURE                          |
| 1184344     | COUPLING BOX KIT                          |
| 1176919     | IGNITOR                                   |
| 1190383     | SENSOR, FLAME                             |
| 1177033 (3) | SWITCH, FLAME ROLL-OUT (RS1)&(RS2)        |
| 1193421     | INDUCER MOTOR/HOUSING KIT                 |
| 1193864     | COLLECTOR BOX KIT                         |
| 1193893     | PRIMARY HEAT EXCHANGER KIT                |
| 1193872     | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |

952.918.8000

[www.mnair.com](http://www.mnair.com)



**MINNESOTA AIR**

**F9MXE0401410A2**

| Part #  | Description            |
|---------|------------------------|
| 1184412 | CONTROL BOARD          |
| 1186064 | MAIN WIRING HARNESS    |
| 1186428 | ECM BLOWER MOTOR       |
| 1185573 | BLOWER WHEEL           |
| 1192339 | TRANSFORMER            |
| 1176919 | IGNITER                |
| 1190383 | FLAME SENSOR           |
| 1190408 | GAS VALVE              |
| 1193418 | INDUCER ASSY.          |
| 1191550 | PRESSURE SWITCH        |
| 1184423 | MAIN LIMIT             |
| 1177033 | SWITCH LIMIT 350F      |
| 1184323 | ROLL OUT               |
| 1184398 | BURNER KIT             |
| 1184395 | COUPLING BOX           |
| 1184288 | CONDENSATE TRAP        |
| 1190325 | DOOR SWITCH            |
| 1193892 | PRIMARY HT. EX. 2 CELL |
| 1193865 | CONDENSING HT. EX.     |

**F9MXE0801716A2**

| Part #      | Description            |
|-------------|------------------------|
| 1184412     | CONTROL BOARD          |
| 1186064     | MAIN WIRING HARNESS    |
| 1186437     | ECM BLOWER MOTOR       |
| 1177180     | BLOWER WHEEL           |
| 1192339     | TRANSFORMER            |
| 1176919     | IGNITER                |
| 1190383     | FLAME SENSOR           |
| 1190408     | GAS VALVE              |
| 1193419     | INDUCER ASSY.          |
| 1191551     | PRESSURE SWITCH        |
| 1184422     | MAIN LIMIT             |
| (2) 1177033 | SWITCH LIMIT 350F      |
| 1184354     | BURNER KIT             |
| 1184342     | COUPLING BOX           |
| 1184288     | CONDENSATE TRAP        |
| 1190325     | DOOR SWITCH            |
| 1193896     | PRIMARY HT. EX. 4 CELL |
| 1193867     | CONDENSING HT. EX.     |

**TEMPSTAR®**  
Heating and Cooling Products

**MXE CRITICAL PARTS**

**F9MXE0601714A2**

| Part #  | Description            |
|---------|------------------------|
| 1184412 | CONTROL BOARD          |
| 1186064 | MAIN WIRING HARNESS    |
| 1186436 | ECM BLOWER MOTOR       |
| 1177180 | BLOWER WHEEL           |
| 1192339 | TRANSFORMER            |
| 1176919 | IGNITER                |
| 1190383 | FLAME SENSOR           |
| 1190408 | GAS VALVE              |
| 1193419 | INDUCER ASSY.          |
| 1191550 | PRESSURE SWITCH        |
| 1184421 | MAIN LIMIT             |
| 1177033 | SWITCH LIMIT 350F      |
| 1184323 | ROLL OUT               |
| 1184353 | BURNER KIT             |
| 1184342 | COUPLING BOX           |
| 1184288 | CONDENSATE TRAP        |
| 1190325 | DOOR SWITCH            |
| 1186216 | PRIMARY HT. EX. 3 CELL |
| 1193867 | CONDENSING HT. EX.     |

**F9MXE1002120A**

| Part #      | Description            |
|-------------|------------------------|
| 1184412     | CONTROL BOARD          |
| 1186064     | MAIN WIRING HARNESS    |
| 1186445     | ECM BLOWER MOTOR       |
| 1172129     | BLOWER WHEEL           |
| 1192339     | TRANSFORMER            |
| 1176919     | IGNITER                |
| 1190383     | FLAME SENSOR           |
| 1190408     | GAS VALVE              |
| 1191199     | INDUCER ASSY.          |
| 1191552     | PRESSURE SWITCH        |
| 1184421     | MAIN LIMIT             |
| (2) 1177033 | SWITCH LIMIT 350F      |
| 1184355     | BURNER KIT             |
| 1184343     | COUPLING BOX           |
| 1184288     | CONDENSATE TRAP        |
| 1190325     | DOOR SWITCH            |
| 1186217     | PRIMARY HT. EX. 5 CELL |
| 1193869     | CONDENSING HT. EX.     |



**MINNESOTA AIR**

**F9MXT0401410A2**

| Part #  | Description            |
|---------|------------------------|
| 1184408 | CONTROL BOARD          |
| 1184507 | MAIN WIRING HARNESS    |
| 1186428 | ECM BLOWER MOTOR       |
| 1185573 | BLOWER WHEEL           |
| 1192339 | TRANSFORMER            |
| 1176919 | IGNITER                |
| 1190383 | FLAME SENSOR           |
| 1190409 | GAS VALVE              |
| 1193418 | INDUCER ASSY.          |
| 1191550 | PRESSURE SWITCH        |
| 1184423 | MAIN LIMIT             |
| 1177033 | SWITCH LIMIT 350F      |
| 1184323 | ROLL OUT               |
| 1184398 | BURNER KIT             |
| 1184395 | COUPLING BOX           |
| 1184288 | CONDENSATE TRAP        |
| 1190325 | DOOR SWITCH            |
| 1193892 | PRIMARY HT. EX. 2 CELL |
| 1193865 | CONDENSING HT. EX.     |

**F9MXT0801716A2**

| Part #      | Description            |
|-------------|------------------------|
| 1184408     | CONTROL BOARD          |
| 1184507     | MAIN WIRING HARNESS    |
| 1186437     | ECM BLOWER MOTOR       |
| 1177180     | BLOWER WHEEL           |
| 1192339     | TRANSFORMER            |
| 1176919     | IGNITER                |
| 1190383     | FLAME SENSOR           |
| 1190409     | GAS VALVE              |
| 1193419     | INDUCER ASSY.          |
| 1191551     | PRESSURE SWITCH        |
| 1184422     | MAIN LIMIT             |
| (2) 1177033 | SWITCH LIMIT 350F      |
| 1184354     | BURNER KIT             |
| 1184342     | COUPLING BOX           |
| 1184288     | CONDENSATE TRAP        |
| 1190325     | DOOR SWITCH            |
| 1193896     | PRIMARY HT. EX. 4 CELL |
| 1193867     | CONDENSING HT. EX.     |

**TEMPSTAR®**  
Heating and Cooling Products

**MXT CRITICAL PARTS**

**F9MXT0601714A2**

| Part #  | Description            |
|---------|------------------------|
| 1184408 | CONTROL BOARD          |
| 1184507 | MAIN WIRING HARNESS    |
| 1186436 | ECM BLOWER MOTOR       |
| 1187180 | BLOWER WHEEL           |
| 1192339 | TRANSFORMER            |
| 1176919 | IGNITER                |
| 1190383 | FLAME SENSOR           |
| 1190409 | GAS VALVE              |
| 1193419 | INDUCER ASSY.          |
| 1191550 | PRESSURE SWITCH        |
| 1184421 | MAIN LIMIT             |
| 1177033 | SWITCH LIMIT 350F      |
| 1184323 | ROLL OUT               |
| 1184353 | BURNER KIT             |
| 1184342 | COUPLING BOX           |
| 1184288 | CONDENSATE TRAP        |
| 1190325 | DOOR SWITCH            |
| 1186216 | PRIMARY HT. EX. 3 CELL |
| 1193867 | CONDENSING HT. EX.     |

**F9MXT1002120A2**

| Part #      | Description            |
|-------------|------------------------|
| 1184408     | CONTROL BOARD          |
| 1184507     | MAIN WIRING HARNESS    |
| 1186445     | ECM BLOWER MOTOR       |
| 1172129     | BLOWER WHEEL           |
| 1192339     | TRANSFORMER            |
| 1176919     | IGNITER                |
| 1190383     | FLAME SENSOR           |
| 1190409     | GAS VALVE              |
| 1191199     | INDUCER ASSY.          |
| 1191552     | PRESSURE SWITCH        |
| 1184421     | MAIN LIMIT             |
| (2) 1177033 | SWITCH LIMIT 350F      |
| 1184355     | BURNER KIT             |
| 1184343     | COUPLING BOX           |
| 1184288     | CONDENSATE TRAP        |
| 1190325     | DOOR SWITCH            |
| 1186217     | PRIMARY HT. EX. 5 CELL |
| 1193869     | CONDENSING HT. EX.     |



**MINNESOTA AIR**

**F9MVE0601714A3**

| Part #  | Description           |
|---------|-----------------------|
| 1186526 | BOARD CONTROL         |
| 1184508 | MAIN HARNESS ASSEMBLY |
| 1193023 | MOTOR BLOWER          |
| 1177180 | WHEEL BLOWER 11 X 8   |
| 1192339 | TRANSFORMER ASY       |
| 1190325 | SWITCH DOOR           |
| 1184353 | KIT BURNER            |
| 1190383 | SENSOR FLAME          |
| 1176919 | IGNITOR               |
| 1190409 | VALVE GAS             |
| 1177033 | SWITCH LIMIT 350 F    |
| 1184323 | TEMP SWITCH ROLL-OUT  |
| 1184421 | SWITCH MAIN LIMIT     |
| 1193419 | INDUCER HOUSING KIT   |
| 1184288 | TRAP CONDENSATE       |
| 1191550 | SWITCH PRESSURE       |
| 1184342 | KIT CPLG BOX          |
| 1186216 | KIT PRI HT EX 3 CELL  |
| 1193867 | KIT CONDENSING HT EX  |

**F9MVE1002120A3**

| Part #  | Description           |
|---------|-----------------------|
| 1186217 | KIT PRI HT EX 5 CELL  |
| 1193869 | KIT CONDENSING HT EX  |
| 1172129 | WHEEL BLOWER          |
| 1193024 | MOTOR BLOWER          |
| 1192339 | TRANSFORMER ASY       |
| 1186526 | BOARD CONTROL         |
| 1190325 | SWITCH DOOR           |
| 1184355 | KIT BURNER            |
| 1190383 | SENSOR FLAME          |
| 1176919 | IGNITOR               |
| 1190409 | VALVE GAS             |
| 1177033 | SWITCH LIMIT 350 F    |
| 1184421 | SWITCH MAIN LIMIT     |
| 1191199 | INDUCER HOUSING KIT   |
| 1184288 | TRAP CONDENSATE       |
| 1191552 | SWITCH PRESSURE       |
| 1184343 | KIT COUPLING BOX      |
| 1184508 | MAIN HARNESS ASSEMBLY |

**TEMPSTAR®**  
Heating and Cooling Products

**MVE CRITICAL PARTS**

**F9MVE0801716A3**

| Part #  | Description                   |
|---------|-------------------------------|
| 1193896 | KIT PRI HT EX 4 CELL          |
| 1193867 | CONDENSING HEAT EXCHANGER KIT |
| 1177180 | WHEEL BLOWER 11 X 8           |
| 1193023 | MTR BLR ECM 3/4 HP            |
| 1192339 | TRANSFORMER ASY               |
| 1186526 | BOARD CONTROL                 |
| 1190325 | SWITCH DOOR                   |
| 1184354 | KIT BURNER                    |
| 1190383 | SENSOR FLAME                  |
| 1176919 | IGNITOR                       |
| 1190409 | VALVE GAS                     |
| 1177033 | SWITCH LIMIT 350 F            |
| 1184422 | SWITCH MAIN LIMIT             |
| 1193419 | INDUCER HOUSING KIT           |
| 1184288 | TRAP CONDENSATE               |
| 1191551 | SWITCH PRESSURE               |
| 1184342 | KIT COUPLING BOX              |
| 1184508 | HARNESS ASY MAIN              |

**F9MVE1202422A3**

| Part #  | Description                   |
|---------|-------------------------------|
| 1193891 | KIT PRIMARY HEAT EXCHANGER    |
| 1184347 | CONDENSING HEAT EXCHANGER KIT |
| 1176937 | WHEEL BLOWER 11 X 11          |
| 1193024 | MOTOR BLOWER                  |
| 1192339 | TRANSFORMER ASY               |
| 1186526 | BOARD CONTROL                 |
| 1190325 | SWITCH DOOR                   |
| 1184356 | KIT BURNER                    |
| 1190383 | SENSOR FLAME                  |
| 1176919 | IGNITOR                       |
| 1190409 | VALVE GAS                     |
| 1177033 | SWITCH LIMIT 350 F            |
| 1184424 | SWITCH MAIN LIMIT             |
| 1191199 | INDUCER HOUSING KIT           |
| 1184288 | TRAP CONDENSATE               |
| 1191552 | SWITCH PRESSURE               |
| 1184344 | KIT COUPLING BOX              |
| 1184508 | MAIN HARNESS ASSEMBLY         |

952.918.8000

www.mnair.com



**MINNESOTA AIR**

**F80VTL0451412B1**

| Part #      | Description                |
|-------------|----------------------------|
| 1193776     | BOARD, CONTROL             |
| 1192339     | TRANSFORMER                |
| 1179162     | WHEEL, BLOWER              |
| 1193725     | MOTOR, BLOWER              |
| 1183456     | VALVE, GAS                 |
| 1176914     | BURNER ASSEMBLY            |
| 1176919     | IGNITOR                    |
| 1190383     | SENSOR, FLAME              |
| 1177033     | SWITCH, FLAME ROLLOUT      |
| 1196818     | INDUCER MOTOR KIT, PRIMARY |
| 1183390 (2) | HEAT EXCHANGER KIT         |
| 1186925     | SWITCH, LIMIT              |
| 1192374     | PRESSURE SWITCH (LOW)      |
| 1192373     | PRESSURE SWITCH (HIGH)     |

**F80VTL0902120B1**

| Part #      | Description                |
|-------------|----------------------------|
| 1193776     | BOARD, CONTROL             |
| 1192339     | TRANSFORMER                |
| 1176937     | WHEEL, BLOWER              |
| 1196878     | MOTOR, BLOWER              |
| 1183456     | VALVE, GAS                 |
| 1176916     | BURNER ASSEMBLY            |
| 1176919     | IGNITOR                    |
| 1190383     | SENSOR, FLAME              |
| 1177033     | SWITCH, FLAME ROLLOUT      |
| 1196820     | INDUCER MOTOR KIT, PRIMARY |
| 1183390 (4) | HEAT EXCHANGER KIT         |
| 1190623     | SWITCH, LIMIT              |
| 1192374     | PRESSURE SWITCH (LOW)      |
| 1192373     | PRESSURE SWITCH (HIGH)     |

**TEMPSTAR®**  
Heating and Cooling Products

**VTL CRITICAL PARTS**

**F80VTL0701716B1**

| Part #      | Description                |
|-------------|----------------------------|
| 1193776     | BOARD, CONTROL             |
| 1192339     | TRANSFORMER                |
| 1177180     | WHEEL, BLOWER              |
| 1193726     | MOTOR, BLOWER              |
| 1183456     | VALVE, GAS                 |
| 1176915     | BURNER ASSEMBLY            |
| 1176919     | IGNITOR                    |
| 1190383     | SENSOR, FLAME              |
| 1177033     | SWITCH, FLAME ROLLOUT      |
| 1196819     | INDUCER MOTOR KIT, PRIMARY |
| 1183390 (3) | HEAT EXCHANGER KIT         |
| 1183524     | SWITCH, LIMIT              |
| 1192374     | PRESSURE SWITCH (LOW)      |
| 1192373     | PRESSURE SWITCH (HIGH)     |

**F80VTL1102122B1**

| Part #      | Description                |
|-------------|----------------------------|
| 1193776     | BOARD, CONTROL             |
| 1192339     | TRANSFORMER                |
| 1097529     | WHEEL, BLOWER              |
| 1196878     | MOTOR, BLOWER              |
| 1183456     | VALVE, GAS                 |
| 1176917     | BURNER ASSEMBLY            |
| 1176919     | IGNITOR                    |
| 1190383     | SENSOR, FLAME              |
| 1177033     | SWITCH, FLAME ROLLOUT      |
| 1196821     | INDUCER MOTOR KIT, PRIMARY |
| 1183390 (5) | HEAT EXCHANGER KIT         |
| 1190623     | SWITCH, LIMIT              |
| 1183833     | SWITCH, LIMIT              |
| 1192374     | PRESSURE SWITCH (LOW)      |
| 1192373     | PRESSURE SWITCH (HIGH)     |



MINNESOTA AIR

**TEMPSTAR**  
Heating and Cooling Products

## VTN CRITICAL PARTS

### F96VTN0401410A1

| Part #  | Description           |
|---------|-----------------------|
| 1193892 | KIT PRI HT EX 2 CELL  |
| 1193865 | KIT CONDENSING HT EX  |
| 1191152 | WHEEL BLOWER DIBC     |
| 1191101 | MOTOR BLOWER ECM      |
| 1192339 | TRANSFORMER ASY       |
| 1191399 | BOARD CONTROL         |
| 1190325 | SWITCH DOOR           |
| 1184398 | BURNER ASY            |
| 1190383 | SENSOR FLAME          |
| 1176919 | IGNITOR               |
| 1190409 | GAS VALVE             |
| 1177033 | SWITCH LIMIT 350 F    |
| 1184323 | TEMP SWITCH ROLL-OUT  |
| 1184879 | SWITCH ASY MAIN LIMIT |
| 1193418 | INDUCER ASSEMBLY      |
| 1191550 | SWITCH PRESSURE       |

### F96VTN0601714A1

| Part #  | Description          |
|---------|----------------------|
| 1193895 | KIT PRI HT EX 3 CELL |
| 1193867 | KIT CONDENSING HT EX |
| 1177180 | WHEEL BLOWER 11 X 8  |
| 1193023 | MTR BLR ECM 3/4 HP   |
| 1192339 | TRANSFORMER ASY      |
| 1191399 | BOARD CONTROL        |
| 1190325 | SWITCH DOOR          |
| 1184353 | BURNER ASY           |
| 1190383 | SENSOR FLAME         |
| 1176919 | IGNITOR              |
| 1190409 | GAS VALVE            |
| 1177033 | SWITCH LIMIT 350 F   |
| 1184323 | TEMP SWITCH ROLL-OUT |
| 1184421 | SWITCH MAIN LIMIT    |
| 1193419 | INDUCER ASSEMBLY     |
| 1191550 | SWITCH PRESSURE      |

### F96VTN0801716A1

| Part #  | Description          |
|---------|----------------------|
| 1193896 | KIT PRI HT EX 4 CELL |
| 1193867 | KIT CONDENSING HT EX |
| 1177180 | WHEEL BLOWER 11 X 8  |
| 1190728 | MOTOR BLOWER 3/4 HP  |
| 1192339 | TRANSFORMER ASY      |
| 1191399 | BOARD CONTROL        |
| 1190325 | SWITCH DOOR          |
| 1184354 | BURNER ASY           |
| 1184322 | SENSOR FLAME         |
| 1176919 | IGNITOR              |
| 1190409 | GAS VALVE            |
| 1177033 | SWITCH LIMIT 350 F   |
| 1177033 | SWITCH LIMIT 350 F   |
| 1184422 | SWITCH MAIN LIMIT    |
| 1193419 | INDUCER ASSEMBLY     |
| 1191551 | SWITCH PRESSURE      |

### F96VTN0802120A1

| Part #  | Description             |
|---------|-------------------------|
| 1193896 | KIT PRI HT EX 4 CELL    |
| 1193868 | KIT SECONDARY HT EX     |
| 1172129 | WHEEL DD11x10x1/2 CW CV |
| 1193024 | MOTOR BLOWER 1 HP       |
| 1192339 | TRANSFORMER ASY         |
| 1191399 | BOARD CONTROL           |
| 1190325 | SWITCH DOOR             |
| 1184354 | BURNER ASY              |
| 1190383 | SENSOR FLAME            |
| 1176919 | IGNITOR                 |
| 1190409 | GAS VALVE               |
| 1177033 | SWITCH LIMIT 350 F      |
| 1177033 | SWITCH LIMIT 350 F      |
| 1184896 | SWITCH ASY MAIN LIMIT   |
| 1193419 | INDUCER ASSEMBLY        |
| 1191551 | SWITCH PRESSURE         |

### F96VTN1002120A1

| Part #  | Description             |
|---------|-------------------------|
| 1193890 | KIT PRI HT EX 5 CELL    |
| 1193869 | KIT CONDENSING HT EX    |
| 1172129 | WHEEL DD11x10x1/2 CW CV |
| 1193024 | MOTOR BLOWER 1 HP       |
| 1192339 | TRANSFORMER ASY         |
| 1191399 | BOARD CONTROL           |
| 1190325 | SWITCH DOOR             |
| 1184355 | BURNER ASY              |
| 1190383 | SENSOR FLAME            |
| 1176919 | IGNITOR                 |
| 1190409 | GAS VALVE               |
| 1177033 | SWITCH LIMIT 350 F      |
| 1177033 | SWITCH LIMIT 350 F      |
| 1184421 | SWITCH MAIN LIMIT       |
| 1193420 | INDUCER ASSEMBLY        |
| 1191552 | SWITCH PRESSURE         |

### F96VTN1202422A1

| Part #  | Description          |
|---------|----------------------|
| 1193474 | KIT PRI HT EX 6 CELL |
| 1193870 | KIT CONDENSING HT EX |
| 1176937 | WHEEL BLOWER 11 X 11 |
| 1190729 | MOTOR BLOWER 1 HP    |
| 1192339 | TRANSFORMER ASY      |
| 1191399 | BOARD CONTROL        |
| 1190325 | SWITCH DOOR          |
| 1184356 | BURNER ASY           |
| 1190383 | SENSOR FLAME         |
| 1176919 | IGNITOR              |
| 1190409 | GAS VALVE            |
| 1177033 | SWITCH LIMIT 350 F   |
| 1177033 | SWITCH LIMIT 350 F   |
| 1184809 | SWITCH ASY LIMIT     |
| 1193420 | INDUCER ASSEMBLY     |
| 1191552 | SWITCH PRESSURE      |

952.918.8000

[www.mnair.com](http://www.mnair.com)





MINNESOTA AIR

**TEMPSTAR®**  
Heating and Cooling Products

## VTN CRITICAL PARTS

### F97VTN0601716A1

| Part #  | Description                               |
|---------|-------------------------------------------|
| 1184353 | BURNER KIT                                |
| 1184323 | SWITCH, FLAME ROLL-OUT (RS2)              |
| 1184484 | CELL PANEL KIT                            |
| 1184421 | LIMIT SWITCH ASSEMBLY                     |
| 1191550 | SWITCH, PRESSURE                          |
| 1184342 | COUPLING BOX KIT                          |
| 1193776 | BOARD, CONTROL                            |
| 1192339 | TRANSFORMER                               |
| 1177180 | FAN, BLOWER WHEEL                         |
| 1193023 | MOTOR, BLOWER                             |
| 1190409 | VALVE, GAS                                |
| 1176919 | IGNITOR                                   |
| 1190383 | SENSOR, FLAME                             |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1)              |
| 1191198 | INDUCER MOTOR HOUSING KIT                 |
| 1193862 | COLLECTOR BOX KIT                         |
| 1193895 | HEAT EXCHANGER KIT, PRIMARY               |
| 1193867 | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |

### F97VTN0801716A1

| Part #  | Description                               |
|---------|-------------------------------------------|
| 1184354 | BURNER KIT                                |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS2)              |
| 1184485 | CELL PANEL KIT                            |
| 1184422 | LIMIT SWITCH ASSEMBLY                     |
| 1191551 | SWITCH, PRESSURE                          |
| 1184342 | COUPLING BOX KIT                          |
| 1193776 | BOARD, CONTROL                            |
| 1192339 | TRANSFORMER                               |
| 1177180 | FAN, BLOWER WHEEL                         |
| 1193726 | MOTOR, BLOWER                             |
| 1190409 | VALVE, GAS                                |
| 1176919 | IGNITOR                                   |
| 1190383 | SENSOR, FLAME                             |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1)              |
| 1191198 | INDUCER MOTOR HOUSING KIT                 |
| 1193862 | COLLECTOR BOX KIT                         |
| 1193896 | HEAT EXCHANGER KIT, PRIMARY               |
| 1193867 | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |

### F97VTN0802120A1

| Part #  | Description                               |
|---------|-------------------------------------------|
| 1184354 | BURNER KIT                                |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS2)              |
| 1184486 | CELL PANEL KIT                            |
| 1184896 | LIMIT SWITCH ASSEMBLY                     |
| 1191551 | SWITCH, PRESSURE                          |
| 1184342 | COUPLING BOX KIT                          |
| 1193776 | BOARD, CONTROL                            |
| 1192339 | TRANSFORMER                               |
| 1172129 | FAN, BLOWER WHEEL                         |
| 1196878 | MOTOR, BLOWER                             |
| 1190409 | VALVE, GAS                                |
| 1176919 | IGNITOR                                   |
| 1190383 | SENSOR, FLAME                             |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1)              |
| 1191198 | INDUCER MOTOR HOUSING KIT                 |
| 1193863 | COLLECTOR BOX KIT                         |
| 1193896 | HEAT EXCHANGER KIT, PRIMARY               |
| 1193868 | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |

### F97VTN1002120A1

| Part #  | Description                               |
|---------|-------------------------------------------|
| 1184355 | BURNER KIT                                |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS2)              |
| 1184487 | CELL PANEL KIT                            |
| 1184421 | LIMIT SWITCH ASSEMBLY                     |
| 1191552 | SWITCH, PRESSURE                          |
| 1184343 | COUPLING BOX KIT                          |
| 1193776 | BOARD, CONTROL                            |
| 1177217 | TRANSFORMER                               |
| 1172129 | FAN, BLOWER WHEEL                         |
| 1196878 | MOTOR, BLOWER                             |
| 1190409 | VALVE, GAS                                |
| 1176919 | IGNITOR                                   |
| 1190383 | SENSOR, FLAME                             |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1)              |
| 1193420 | INDUCER MOTOR HOUSING KIT                 |
| 1193863 | COLLECTOR BOX KIT                         |
| 1193890 | HEAT EXCHANGER KIT, PRIMARY               |
| 1193869 | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |

### F97VTN1202422A1

| Part #  | Description                               |
|---------|-------------------------------------------|
| 1184356 | BURNER KIT                                |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS2)              |
| 1191064 | CELL PANEL KIT                            |
| 1191469 | LIMIT SWITCH ASSEMBLY                     |
| 1191552 | SWITCH, PRESSURE                          |
| 1184344 | COUPLING BOX KIT                          |
| 1193776 | BOARD, CONTROL                            |
| 1192339 | TRANSFORMER                               |
| 1176937 | FAN, BLOWER WHEEL                         |
| 1193727 | MOTOR, BLOWER                             |
| 1190409 | VALVE, GAS                                |
| 1176919 | IGNITOR                                   |
| 1190383 | SENSOR, FLAME                             |
| 1177033 | SWITCH, FLAME ROLL-OUT (RS1)              |
| 1193420 | INDUCER MOTOR HOUSING KIT                 |
| 1193864 | COLLECTOR BOX KIT                         |
| 1193474 | HEAT EXCHANGER KIT, PRIMARY               |
| 1193870 | SECONDARY (CONDENSING) HEAT EXCHANGER KIT |

952.918.8000

www.mnair.com



# MINNESOTA AIR

**MUCH MORE THAN AN HVAC DISTRIBUTOR**

---

**952.918.8000**

**[www.mnair.com](http://www.mnair.com)**

---

## **Bloomington - Distribution Center**

6901 W Old Shakopee Rd, Bloomington, MN 55438

**Open Monday - Friday: 7:00 AM - 5:00 PM**

**Open Saturday: 8:00 AM - 12:00 PM - OPT 6**

Will Call is open until 10:00 PM, Monday - Friday.

*If picking up after 5:00 PM, you MUST reference an order number.*

## **Lake Elmo - Distribution Center:**

11190 Hudson Blvd N Suite 100, Lake Elmo, MN 55042

**Open Monday - Friday: 7:00 AM - 5:00 PM**

**Open Saturday: 8:00 AM - 12:00 PM - OPT 6**

Will Call is open until 10:00 PM, Monday - Friday.

*If picking up after 5:00 PM, you MUST reference an order number.*

## **St. Cloud - Distribution Center**

6704 8th Ave S Suite 100, St. Cloud, MN 56301

**Open Monday - Friday: 7:00 AM - 5:00 PM**

## **Crystal - City Desk**

5524 Lakeland Ave N, Crystal, MN 55429

**Open Monday - Friday: 7:00 AM - 5:00 PM**

---

## **After Hours Emergency Service**

**612.790.3110**

**\*Additional Fees May Apply\***

**\*\*Note about calling for parts. All equipment orders need to be placed online and referenced after calling\*\***

**TEMPSTAR®**  
Heating and Cooling Products

---

**Order Online**

**[www.mnair.com](http://www.mnair.com)**

**Online Training**

**[www.mnairacademy.com](http://www.mnairacademy.com)**

